

EAR-HOOK MICROPHONE

INSTRUCTION MANUAL YP-MS4E

Thank you for purchasing TRANTEC's Ear-hook Microphone.


Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

This product is an expendable item. No warranty is provided for any trouble except incipient failure

1. GENERAL DESCRIPTION

The TRANTEC YP-MS4E is ear-hook microphone of an omnidirectional pick-up pattern, featuring a light weight design.

2. NOMENCLATURE

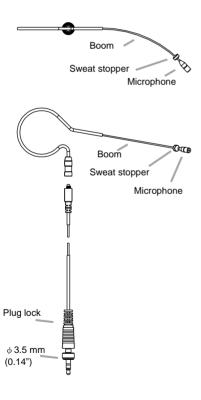

3. HOW TO USE

- By bending the boom slightly, position the microphone as close to the cheek as possible for the best sound reproduction.
- Do not hold the microphone while bending, bend the boom, making a smooth curve with your thumb to best fit the profile of the face.
- Make sure the join is connect properly to prevent unwanted noise. Do not over tighten the join.
- The donut-shaped sweat stopper is to protect the microphone's element from sweat and moisture.
- Position the sweat stopper as close to the microphone's element as possible to provide maximum protection.

4. SPECIFICATIONS

Туре	Electret condenser type
Directivity	Omnidirectional
Frequency Response	20 – 20,000 Hz
Sensitivity	-67 dB ± 3 dB
	(0 dB=1V/0.1Pa, 1kHz)
Maximum Input Level	115 dBSPL, 1kHz at 1%
Cord Length	1.3 m (4.27 ft)
Terminal	φ 3.5 mm (0.14")
	Stereo plug
Finish	Beige color
Weight	16 g or 0.56 oz
	(cable included)
Accessories	Windscreen1
	Cable clip1